


# HOW TO THREAD

## TOP LOADING BOBBIN


1

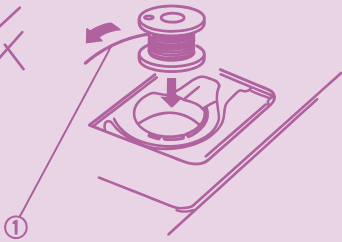

Place a bobbin in the bobbin holder with the thread running off counterclockwise.

② End of thread


2

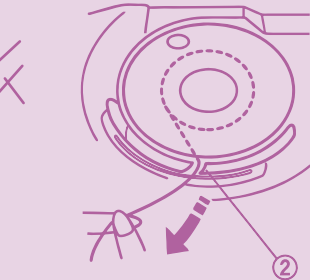

Guide the thread into the first notch ② on the front side of the bobbin holder.


② Notch

3

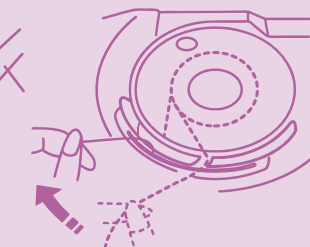

Draw the thread to the left, sliding it between the tension spring blades.


4

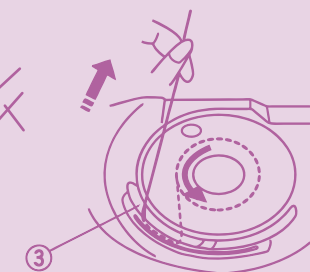

Continue to draw the thread lightly until the thread slips into the second notch ③. Pull out about 6" (15 cm) of thread.

③ Notch

5

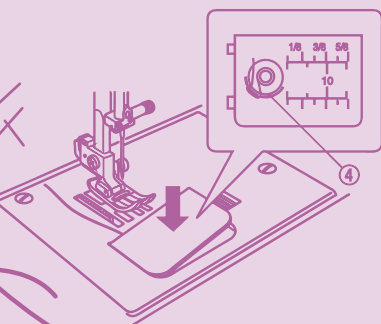

Attach the hook cover plate. Check the threading by referring to the diagram ④ shown on the hook cover plate.

④ Threading diagram